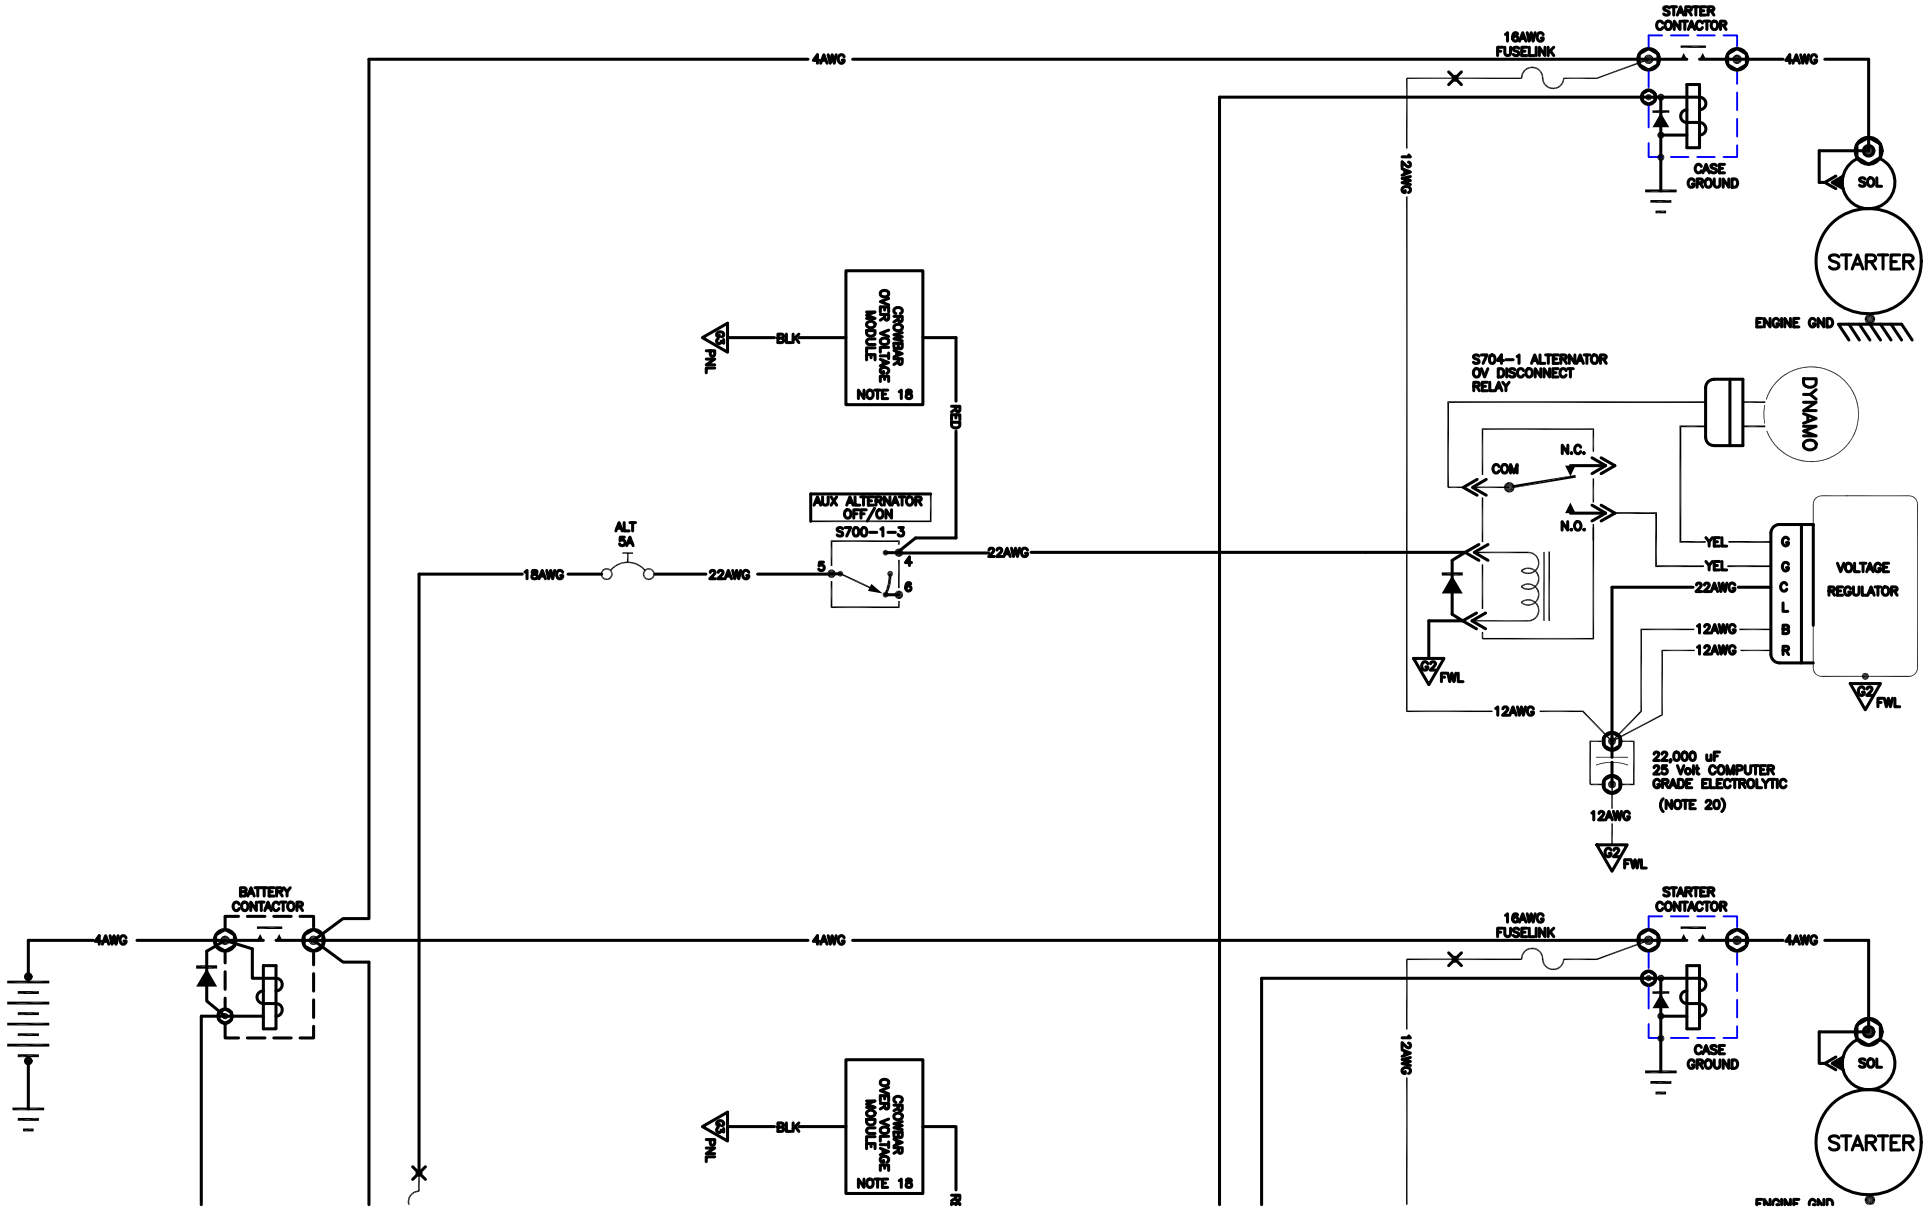
STARTER CONTACTOR
16AWG FUSELINK
4AWG
CASE GROUND
SOL
STARTER
ENGINE GND
12AWG
CROWBAR OVER VOLTAGE MODULE
NOTE 18
BLK
G2 PNL
RED
AUX ALTERNATOR OFF/ON
S700-1-3
ALT 5A
18AWG
22AWG
5
4
6
S704-1 ALTERNATOR OV DISCONNECT RELAY
DYNAMO
COM
N.C.
N.O.
YEL
G
C
L
B
R
VOLTAGE REGULATOR
G2 FWL
22,000 uF 25 Volt COMPUTER GRADE ELECTROLYTIC (NOTE 20)
BATTERY CONTACTOR